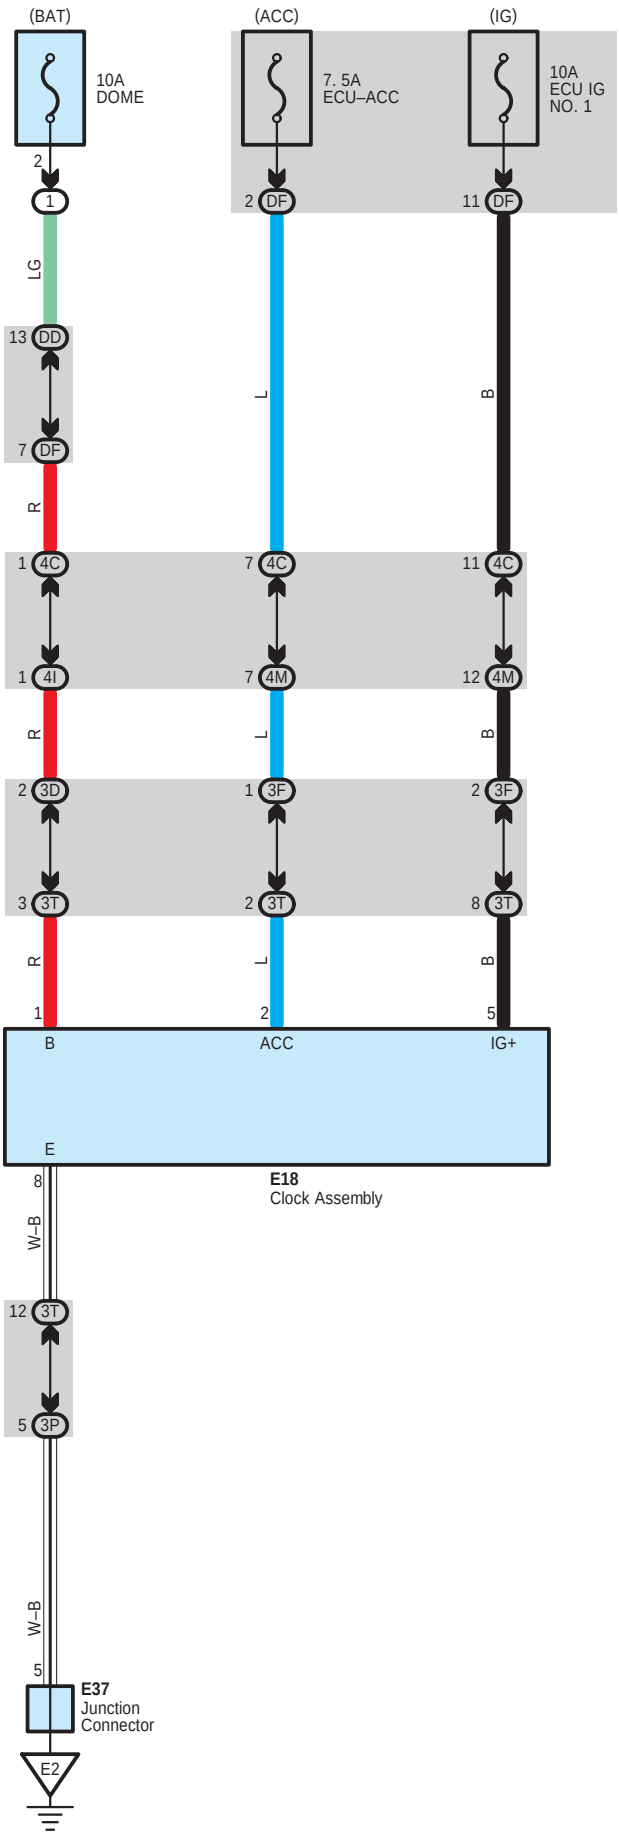
(BAT)
(ACC)
(IG)
10A
DOME
7. 5A
ECU–ACC
10A
ECU IG
NO. 1
2
1
LG
13 DD
7 DF
R
1 4C
1 4I
R
2 3D
3 3T
R
1
B
2 DF
L
7 4C
7 4M
L
1 3F
2 3T
L
2
ACC
11 DF
B
11 4C
12 4M
B
2 3F
8 3T
B
5
IG+
E
E18
Clock Assembly
8
W–B
12 3T
5 3P
W–B
5
E37
Junction
Connector
E2

: Parts Location

Code	See Page	Code	See Page	Code	See Page
E18	58	E37	58		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3D	36	Instrument Panel Wire and J/B No.3 (Instrument Panel Left)
3F		
3P		
3T		
4C	42	Instrument Panel Wire and J/B No.4 (Instrument Panel Right)
4I		
4M		
DD	30	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
DF	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

: Ground Points

Code	See Page	Ground Points Location
E2	69	Instrument Panel Brace LH